

When you are finished using your Empire marker it is important that you prepare it for storage. This will not only serve to increase the life of the marker, but will assure optimum performance on your next outing.

- The Empire marker must be clear of all paint and air sources when not being used.
- Be sure to have marker de-cocked and in "safe mode" when not in use.
- Make sure a barrel-blocking device is in place.
- Store your Empire marker and propellant in cool dry place.
- Keep your Empire marker away from unsupervised children.
- Your Empire marker must be free of all paint and not attached to a propellant source while being transported to and from the playing field.
- Observe and obey all local, state, and federal laws concerning the transportation of paintball markers. For information concerning any of the laws in your area, contact your local law enforcement.
- Always store the marker in a secure location when not in use so as to prevent access by unauthorized persons.

| Schematic # | Description | SKU# |
|-------------|-----------------------|-------|
| 1 | Safety Ball | 10730 |
| 2 | Safety Spring | 10750 |
| 3 | Trigger Pin | 10766 |
| 4 | Grip Screws | 10782 |
| 5 | Feed Elbow (complete) | 17757 |
| 6 | Feed Elbow Screw | 17759 |
| 7 | Feed Elbow Lever | 17760 |
| 8 | Feed Elbow Collar | 17761 |
| 9 | Feed Elbow Seat | 17762 |

| Schematic # | # Description | SKU# |
|-------------|---------------------------------------|-------|
| 10 | Feed Elbow Spacer | 17763 |
| 11 | | 17956 |
| 12 | Trigger Frame | 17956 |
| | Trigger Frame Screw (10-32 x.5) | |
| 13 | Grips | 17959 |
| 14 | Barrel | 19250 |
| 15 | Pump Handle | 19251 |
| 16 | Pump Screw | 19252 |
| 17 | Pump Screw O-ring | 19253 |
| 18 | Body | 19254 |
| 19 | Velocity Adjuster Wrench | 19255 |
| 20 | Top Rail | 19256 |
| 21 | Top Rail Screw | 19257 |
| 22 | Trigger | 19258 |
| 23 | Trigger Spring | 19259 |
| 24 | Safety Slide | 19260 |
| 25 | Bolt | 19261 |
| 26 | Bolt O-ring | 19262 |
| 27 | Velocity Adjuster | 19263 |
| 28 | Velocity Adjuster O-ring | 19264 |
| 29 | Main spring | 19265 |
| 30 | Hammer Assembly | 19266 |
| 31 | Sear Assembly (sear, pin, and spring) | 19267 |
| 32 | Power Tube | 19268 |
| 33 | Power Tube Nut | 19269 |
| 34 | Power Tube Nut O-ring | 19270 |
| 35 | Cupseal | 19387 |
| 36 | Cupseal Nut | 19394 |
| 37 | Valve Spring | 19273 |
| 38 | Valve Housing | 19274 |
| 39 | Detent | 19275 |
| 40 | Trigger Set Screw | 19276 |

EMPIRE TESTED

