


PARTS DIAGRAM

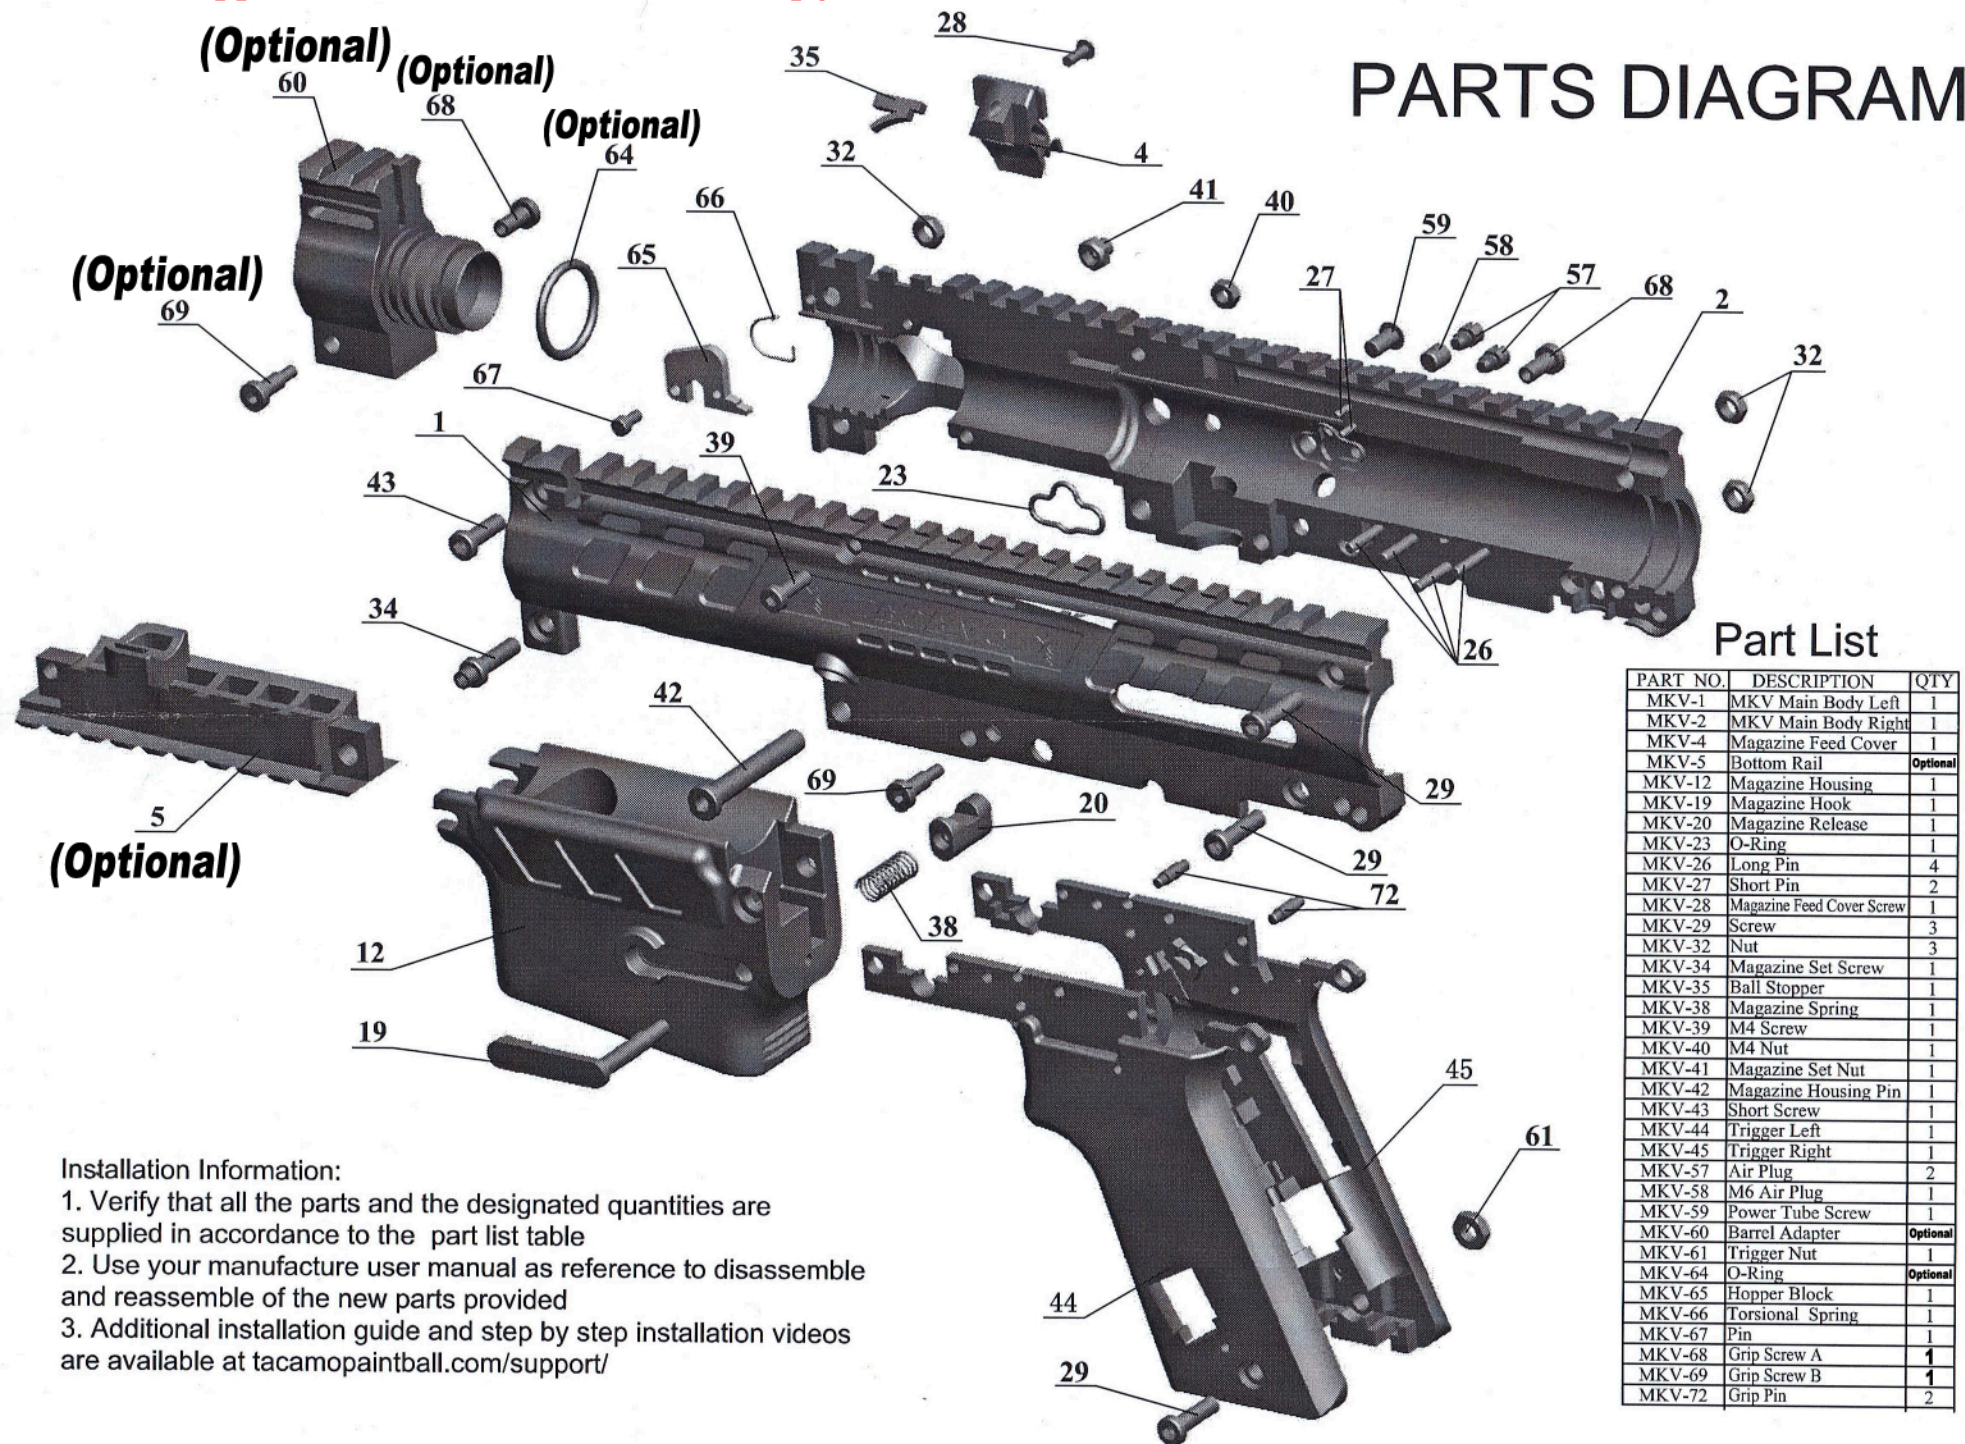

Part List

PART NO.	DESCRIPTION	QTY
MKV-1	MKV Main Body Left	1
MKV-2	MKV Main Body Right	1
MKV-4	Magazine Feed Cover	1
MKV-5	Bottom Rail	Optional
MKV-12	Magazine Housing	1
MKV-19	Magazine Hook	1
MKV-20	Magazine Release	1
MKV-23	O-Ring	1
MKV-26	Long Pin	4
MKV-27	Short Pin	2
MKV-28	Magazine Feed Cover Screw	1
MKV-29	Screw	3
MKV-32	Nut	3
MKV-34	Magazine Set Screw	1
MKV-35	Ball Stopper	1
MKV-38	Magazine Spring	1
MKV-39	M4 Screw	1
MKV-40	M4 Nut	1
MKV-41	Magazine Set Nut	1
MKV-42	Magazine Housing Pin	1
MKV-43	Short Screw	1
MKV-44	Trigger Left	1
MKV-45	Trigger Right	1
MKV-57	Air Plug	2
MKV-58	M6 Air Plug	1
MKV-59	Power Tube Screw	1
MKV-60	Barrel Adapter	Optional
MKV-61	Trigger Nut	1
MKV-64	O-Ring	Optional
MKV-65	Hopper Block	1
MKV-66	Torsional Spring	1
MKV-67	Pin	1
MKV-68	Grip Screw A	1
MKV-69	Grip Screw B	1
MKV-72	Grip Pin	2

Installation Information:

1. Verify that all the parts and the designated quantities are supplied in accordance to the part list table
2. Use your manufacture user manual as reference to disassemble and reassemble of the new parts provided
3. Additional installation guide and step by step installation videos are available at tacamopaintball.com/support/